

# **DT-3300 Diagnostic Tester**

## **Software for Trucks & Buses**

**17th Edition    OCTOBER 2016**

---



**Japan Venture Incorporated**

# TABLE OF CONTENTS

## **Table of Diagnostic Software for 24V Vehicles (Trucks & Buses)**

### **HINO**

1. HINO Diagnostic Software (Ver 5.**) -----	3
List of Specific Vehicle System	
2. HINO Diagnostic Software (Ver 5.**) -----	4
List of Engine	
3. HINO Diagnostic Software (Ver 5.**) -----	5
List of Diagnostic Functions	

### **ISUZU**

4. Isuzu Diagnostic Software (Ver 7.**) -----	8
List of Specific Vehicle System	
5. Isuzu Diagnostic Software (Ver 7.**) -----	9
List of Engine	
6. Isuzu Diagnostic Software (Ver 7.**) -----	10
List of Diagnostic Functions	

### **UD TRUCKS (NISSAN)**

7. UD Trucks Diagnostic Software (Ver 2.**) -----	17
List of Specific Vehicle System	
8. UD Trucks Diagnostic Software (Ver 2.**) -----	17
List of Engine	
9. UD Trucks Diagnostic Software (Ver 2.**) -----	18
List of Diagnostic Functions	

### **MITSUBISHI FUSO**

10. Mitsubishi Fuso Diagnostic Software (Ver 7.**) -----	19
List of Specific Vehicle System	
11. Mitsubishi Fuso Diagnostic Software (Ver 7.**) -----	21
List of Engine	
12. Mitsubishi Fuso Diagnostic Software (Ver 7.**) -----	22
List of Diagnostic Functions	

# 1. HINO DIAGNOSTIC SOFTWARE (Ver5.4\*) List of Specific Vehicle System

VEHICLE TYPE	REQUIRED SYSTEM	REQUIRED MODEL YEAR	READ FAULT CODE	FREEZE DISPLAY	DATA STREAM	WORK SUPPORT	ACTIVE TEST
DUTRO	ENG	2002~	●	●	●	●	●
	A/T	2003~	●	●	●		
	ABS	2003~	●		●	●	●
	SRS	2003~	●				
	BODY CONTROL	2014~	●		●	●	●
	IMMOBILIZER	2014~	●		●		
RANGER	ENG	2000~	●	●	●	●	●
	A/T	2003~	●	●	●		
	ABS	2000~	●		●	●	●
	SRS	2002~	●				
PROFIA	ENG	2000~	●	●	●	●	●
	SCR	2010~	●				
	ABS	2000~	●				
	SRS	2002~	●				
LIESSE	ENG	2000~	●	●	●	●	●
	A/T	2003~		●	●		
	ABS	2003~	●		●	●	●
	SRS	2002~	●				
PONCHO	ENG	2000~	●	●	●	●	●
	A/T	2003~		●	●		
	ABS	2003~	●		●	●	●
	SRS	2002~	●				
MELPHA	ENG	1999~	●	●	●		●
	ABS	1999~	●		●		●
	SRS	1999~	●				
RAINBOW	ENG	2000~	●	●	●		●
	ABS	2000~	●				
	SRS	2000~	●				
BLUE RIBBON	ENG	2000~	●	●	●		●
	ABS	2000~	●				
	SRS	2000~	●				
SELEGA HIGH DECKER	ENG	2000~	●	●	●		●
	ABS	2000~	●				
	SRS	2000~	●				

**NOTE:** The engine diagnostic function supports common rail, electronic governor and mechanical governors engines.

## 2. HINO DIAGNOSTIC SOFTWARE (Ver5.4\*) List of Engines

CLASSIFICATION	VEHICLE MODEL NAME	VEHICLE MODEL	ENGINE MODEL	REQUIRED MODEL YEAR		DIAGNOSTIC COUPLER	
				Japanese Calendar	Western Calendar	COM	EXCL
LIGHT-DUTY TRUCK	DUTRO	KK	S05C, S05D	' 14. 06~	' 02. 06~	●	
		PA, PB	S05D, J05D	' 16. 05~	' 04. 05~	●	
		PA, PB	N04C	' 17. 04~	' 05. 04~	●	
		BKG	N04C	' 18. 09~	' 06. 09~	●	
		PDG	N04C	' 18. 09~	' 06. 09~	●	
		SKG	N04C	' 23. 09~	' 11. 09~	●	
		TKG, TQG	N04C	' 25. 05~	' 13. 05~	●	
MEDIUM-DUTY TRUCK	RANGER	KC, KK	J07C, J08C, J05C	' 09. 10~	' 97. 10~	●	
		PA, PB	J05D, J07E	' 15. 10~	' 03. 10~	●	
		ADG	J07E, J08E	' 17. 05~	' 05. 05~	●	
		BDG	J07E, J08E	' 18. 09~	' 06. 09~	●	
		SKG	J05E, J07E	' 23. 10~	' 11. 10~	●	
		SDG	J05E	' 23. 07~	' 11. 07~	●	
		TKG, LKG, QKG	J07E	' 22. 07~	' 10. 07~	●	
		LDG, TQG	J08E	' 23. 07~	' 11. 07~	●	
HEAVY-DUTY TRUCK	PROFIA	KC, KL	K13C, P11C	' 09. 10~	' 97. 10~	●	
		KS	P11C	' 15. 11~	' 03. 11~	●	
		PK	E13C	' 15. 11~	' 03. 11~	●	
		ADG	E13C	' 18. 02~	' 06. 02~	●	
		BKG	E13C	' 18. 07~	' 06. 07~	●	
		BDG, QPG	A09C	' 19. 04~	' 07. 04~	●	
		LKG, QKG	E13C	' 22. 07~	' 10. 07~	●	
		LDG, QPG, QDG	E13C	' 22. 07~	' 10. 07~	●	
LIGHT-DUTY BUS	PONCHO	ADG	J05D	' 18. 03~	' 06. 03~	●	
		BDG	J05D	' 19. 07~	' 07. 07~	●	
	LIESSE	PB	J05D	' 04. 08~	' 04. 08~	●	
		BDG	J05D	' 19. 06~	' 07. 06~	●	
	LIESSE II	BDG, PDG	N04C	' 19. 07~	' 07. 07~	●	
MEDIUM-DUTY BUS	MELPHA	KK, PB, BDG	J08C, J08E	' 09. 10~	' 97. 10~	●	
		PKG, LKG, SDG	J07E	' 16. 08~	' 04. 08~	●	
	RAINBOW	KK, KL	J08C, P11C	' 9. 10~	' 97. 10~	●	
		PB, BDG	J07E, J08E	' 16. 08~	' 04. 08~	●	
		LKG, SDG	4HK1	' 23. 11~	' 11. 11~	●	
		KK	J08C	' 09. 10~	' 97. 10~	●	
HEAVY-DUTY BUS	BLUE RIBBON	PJ	6HK1	' 16. 12~	' 04. 12~	●	
		LKG, SDG	6HK1	' 22. 08~	' 10. 08~	●	
		ADG	E13C	' 16. 08~	' 04. 08~	●	
	SELEGA HD	QRG, QPG	E13C, A09C	' 16. 08~	' 04. 08~	●	
		BDG	J08E	' 24. 05~	' 12. 05~	●	

### 3. HINO DIAGNOSTIC SOFTWARE (Ver5.4\*) List of Diagnostic Functions

SYSTEM	MAIN-FUNCTION	SUB-FUNCTION	CONTENTS	
ENGINE	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
	ACTIVE TEST	POWER BALANCE		Stops fuel injection at cylinder #1 ~/#6.
		VNT OPENING		Tests increase/decrease of VN turbo opening.
		HIGH-PRESSURE FUEL SYSTEM		Inspects high pressure fuel system.
		EGR OPENING		Test increase/decrease of EGR Valve opening.
		OBJECTIVE ENGINE SPEED		Sets the idling speed.
		INTAKE THROTTLE OPENING		Tests intake throttle valve opening.
		EXHAUST BRK OPERATION		Checks exhaust brake operation.
		ENG RETARDER 2 OPR' N		Checks engine retarder 2 operation.
		ENG RETARDER 1 OPR' N		Checks engine retarder 1 operation.
		PULSE EGR SOL VALVE		Checks pulse EGR SOL valve operation.
		EGR SOLENOID VALVE 3		Checks EGR solenoid valve 3 operation.
		EGR SOLENOID VALVE 2		Checks EGR solenoid valve 2 operation.
		EGR SOLENOID VALVE 1		Checks EGR solenoid valve 1 operation.
		VGT SOLENOID VALVE 3		Checks VGT solenoid valve 3 operation.
		VGT SOLENOID VALVE 2		Checks VGT solenoid valve 2 operation.
		VGT SOLENOID VALVE 1		Checks VGT solenoid valve 1 operation.
		ENGINE STOP		Checks engine stop.
		PCV SOL VALVE 2 Stop		Checks PCV solenoid valve 2 stop.
		PCV SOL VALVE 1 Stop		Checks PCV solenoid valve 1 stop.
		PRE-HEAT RELAY OPR' N		Checks pre-heat relay operation.
		TC TERMINAL ON		Displays the diagnostic batch combination meter.
		COMMON RAIL PRESSURE		Sets common rail pressure value.
		VARIABLE TIMING		Sets the injection timing
		ENGINE SPEED		Sets the engine speed.
		PRE-LIFT VARIABLE QTY		Sets the pre-lift variable quantity.
		EXHAUST BRAKE VALVE		Checks exhaust brake solenoid valve operation.
		FSV SOLENOID VALVE		Checks intake air control valve operation.
		CBCS1 SOLENOID VALVE		Checks CBCS1 solenoid valve operation.
		CBCS2 SOLENOID VALVE		Checks CBCS2 solenoid valve operation.
		EGR AIR CUT SOLENOID VALVE		Checks EGR air cut solenoid valve operation.
		EGR CUT SOLENOID VALVE		Checks EGR cut solenoid valve operation.
		CBCS1 SOLENOID VALVE		Checks CBCS1 solenoid valve operation.
		CBCS2 SOLENOID VALVE		Checks CBCS2 solenoid valve operation.
		EGR AIR CUT SOLENOID VALVE		Checks EGR air cut solenoid valve operation.
		EGR CUT SOLENOID VALVE		Checks EGR cut solenoid valve operation.
		NOISE SUPPRESSOR		Checks noise suppressor solenoid valve
		NOISE SUPPRESSOR 2		Checks noise suppressor 2 solenoid valve
		INTAKE SHUTTER		Checks intake shutter solenoid valve operation.
		EXHAUST BRAKE LAMP		Checks exhaust brake lamp ON/OFF operation.
		AUX BRAKE RELAY 1		Checks auxiliary brake relay 1 operation.
		AUX BRAKE RELAY 2		Checks auxiliary brake relay 2 operation.
		ACCELERATOR LINK RELAY		Checks accelerator inter-lock relay operation.

NOTE: The contents of the display, active test and work support diagnostic functions may differ depending on the vehicle model and model year.

### 3. HINO DIAGNOSTIC SOFTWARE (Ver5.4\*) List of Diagnostic Functions

SYSTEM	MAIN-FUNCTION	SUB-FUNCTION	CONTENTS	
ENGINE	ACTIVE TEST	TURBO WARNING FUNCTION	Checks turbo warning function operation	
		MULTIPLE DISPLAY FUNC	Checks multiple function operation.	
		HEATER RELAY	Checks heater relay operation.	
		CHECK ENGINE LAMP	Checks engine lamp ON/OFF operation.	
		PRE-HEAT LAMP °	Checks pre-heat lamp ON/OFF operation.	
	WORK SUPPORT	ID CODE CHECK	Checks the Injector ID Code of each Cylinder.	
		ID CODE MANU REGISTRATION	Registers ID code during injector replacement.	
		READ/STORE ID CODE	Reads & records ID code before ECM replacement.	
		ID CODE AUTO REGISTRATION	Writes recorded ID code after ECM replacement.	
		PUMP INITIALIZATION	Clears and initializes supply pump learning value.	
		DPR FORCED REGENERATION	Removes accumulated PM in DPR thru repeat combustion.	
		DPR STATUS DISPLAY	Displays the DPR status history/records.	
		DPR STATUS RESET	Clears the DPR status history/records.	
		DPR DIFFERENTIAL PRESSURE CHECK	Displays the DPR inlet/outlet differential exhaust pressure.	
		PM ACCUMULATED QUANTITY HISTORY INITIALIZATION	Clears the accumulated PM data history.	
		ENGINE HISTORY INITIALIZATION	Clears the engine data history.	
		CRUISE SPEED ADJUSTMENT	Performs cruise speed setting.	
		SPEED LIMITER CANCELLATION	Performs release of vehicle speed limiter.	
		SPEED LIMITER ADJUSTMENT	Performs vehicle speed limiter adjustment.	
SYSTEM OPERATION HISTORY INITIALIZATION	Clears data system history.			
AT	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
	ACTIVE TEST	SHIFT POSTION FIXED	Specifies the irregular position	
	WORK SUPPORT	AT INITIALIZATION	Initializes during AT body & ECU replacement.	
ABS	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
	ACTIVE TEST	ABS SOLENOID	SFRH Drive	
			RR Drive	
			LH Drive	
			LR Drive	
			SRRH DRive	
		VSC SOLENOID	VSC Solenoid Drive	
		SOLENOID RELAY	Checks solenoid relay operations.	
		ABS MOTOR RELAY	ABS Motor Relay Drive	
		ABS LAMP	Checks ABS lamp ON/OFF operation.	
	BRAKE WARNING LAMP	Brake Warning Lamp ON/OFF		
WORK SUPPORT	CLEAR BACK-UP MEMORY	Clears the C/U memory.		

- NOTE: 1. The contents of the display, active test and work support diagnostic functions may differ depending on the vehicle model and model year.
2. Engine work support functions (cruise speed adjustment, speed limiter cancellation, speed limiter adjustment) supports vehicle model KL with model year 2000~2003 only.
3. The speed limiter can be set from 35 km/hour up to 120 km/hour, however speed limit can only be up to 80km/hour when running.

### 3. HINO DIAGNOSTIC SOFTWARE (Ver5.4\*) List of Diagnostic Functions

SYSTEM	MAIN-FUNCTION	SUB-FUNCTION	CONTENTS	
VEHICLE CONTROL	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
	ACTIVE TEST	STOP & START OFF LAMP		Display Lamp ON/OFF
		STOP & START OPERATING LAMP		Display Lamp ON/OFF
		DIAGNOSTIC LAMP		Display Lamp ON/OFF
		ESS LAMP		Display Lamp ON/OFF
		EXHAUST BRAKE LAMP		Display Lamp ON/OFF
		BRK LOCK VALVE RELAY 1		Brake Lock Valve Relay 1 ON/OFF
		BRK LOCK VALVE RELAY 2		Brake Lock Valve Relay 2 ON/OFF
		ACTUATOR RELAY		Actuator Relay ON/OFF
		STARTER ON RELAY 1		Starter ON Relay 1 ON/OFF
		STARTER ON RELAY 2		Starter ON Relay 2 ON/OFF
		BLOWER VENTILATION DELAY RELAY		Blower Fresh Air Delay Relay ON/OFF
	STARTER OPERATION COUNT CHECK		Displays starter operation count.	
WORK SUPPORT	STARTER OPERATION COUNT WRITING		Writes the starter operation count (Starter Replacement).	
SRS	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
IMMOBILIZER	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	

NOTE: The contents of the display, active test and work support diagnostic functions may differ depending on the vehicle model and model year.

#### 4. ISUZU DIAGNOSTIC SOFTWARE (Ver7.5\*) List of Specific Vehicle System

VEHICLE TYPE	REQUIRED SYSTEM	REQUIRED MODEL YEAR	READ FAULT CODE	FREEZE DISPLAY	DATA STREAM	WORK SUPPORT	ACTIVE TEST
ELF	ENG	2002~	●		●	●	●
	STOP IDLING	2007~	●		●	●	
	CLUTCH-FREE	2002~	●		●	●	
	SMOOTHER E	2002~	●		●	●	
	SMOOTHER Ex	2007~	●		●	●	
	ABS/ASR	1998~	●		●		●
	BCM	2006~	●		●	●	●
	IMMOBILIZER	2006~	●				
	MIMAMORI	2007~	●		●	●	
	SRS	2002~	●				
FORWARD	ENG	1996~	●		●	●	●
	UREA SCR	2010~	●		●	●	●
	SMOOTHER FX	2004~	●		●	●	
	STOP IDLING	2007~	●		●	●	
	ABS/ASR	2004~	●		●		●
	ABS6	2007~	●		●		●
	BCM	2006~	●		●	●	●
	IMMOBILIZER	2006~	●				
	SRS	2006~	●				
GIGA	ENG	1996~	●		●	●	●
	UREA SCR	2010~	●		●	●	●
	SMOOTHER G	2006~	●				
	AIR SUSPENSION	2006~	●		●	●	●
	ABS6	2004~	●		●		●
	ESC	2004~	●		●		●
	ABS/ASR CI12	2004~	●		●		●
	ABS/IESC	2004~	●		●		●
	SRS	2004~	●		●	●	●
	ISS	2004~	●		●	●	●
JOURNEY	ENG	2000~	●		●	●	●
	AT	2004~	●		●	●	●
	ABS	2004~	●		●	●	●
	SRS	2004~	●				
ERGA MIO	ENG	2000~	●		●	●	●
	ISS	2004~	●		●	●	●
	UREA SCR	2010~	●		●	●	●
	ABS6	2011~	●		●		●
	SRS	2004~	●				
GALA MIO	ENG	2000~	●		●	●	●
	SRS	2004~	●				
GALA	ENG	2000~	●		●	●	●
	SRS	2005~	●				
ERGA	ENG	1996~	●		●	●	●
	AT	1998~	●		●		
	UREA SCR	2010~	●		●	●	●
	ABS6	2011~	●		●		●
FORKLIFT	AIR SUSPENSION	1998~	●		●		
	ENG	2004~	●		●	●	●



## 5. ISUZU DIAGNOSTIC SOFTWARE (Ver7.5\*) List of Engines

CLASSIFICATION	VEHICLE MODEL NAME	VEHICLE MODEL	ENGINE MODEL	REQUIRED MODEL YEAR		DIAGNOSTIC COUPLER	
				JAPANESE CALENDAR	WESTERN CALENDAR	COM	EXCL
LIGHT-DUTY TRUCK	E L F	KK	4HF1、4HF1-CNG	'11.01~	'99.01~	●	
		KK	4HG1、4HG1-LPG	'11.04~	'99.04~	●	
		KK	4HJ1	'11.04~	'99.04~	●	
		KK	4HK1-T	'12.12~	'00.12~	●	
		KR	4HJ1	'14.08~	'02.08~	●	
		KR	4HL1	'14.08~	'02.08~	●	
		PB	4HG1 (LPG)	'16.06~	'04.06~	●	
		PB	4HF1 (CNG)	'16.06~	'04.06~	●	
		PB	4JG2 (LPG)	'16.06~	'04.06~	●	
		PB	4HL1-N	'16.06~	'04.06~	●	
		AFG	4HV1 (CNG)	'17.04~	'05.04~	●	
		PDG	4HK1-TC	'18.12~	'06.12~	●	
		BKG, BDG	4JJ1-TC	'18.12~	'06.12~	●	
		NFG	4HV1 (CNG)	'19.07~	'07.07~	●	
		SKG, TKG	4JJ1-TCC, TCS, TCH	'23.05~	'11.05~	●	
		TRG, TPG	4JJ1-TCC, TCS, TCH	'23.05~	'11.05~	●	
MEDIUM-DUTY TRUCK	FORWARD	KL	6HH1-(N) (S)	'08.04~	'96.04~		●
		KK, KL	6HL1-(N) (S)	'08.04~	'96.04~		●
		KK, KL	6HK1-TC	'08.04~	'96.04~		●
		PJ	6HK1-TC	'16.04~	'04.04~		●
		PB	6HL1-TC	'16.04~	'04.04~		●
		PA	6HK1-TC	'16.10~	'04.10~		●
		PKG, PDG	4HK1-TC	'19.05~	'07.05~	●	
		PDG	4HK1 (CNG)	'19.05~	'07.09~	●	
		SKG, TKG	4HK1-TCC, TCS, TCH	'23.05~	'11.05~	●	
		TKG, LKG	6HK1-TCC, TCS, TCH	'23.05~	'11.05~	●	
HEAVY-DUTY TRUCK	GIGA	KC	6WA1	'08.02~	'96.02~		●
		KC, KL	8PE1-(N) (S)	'08.02~	'96.02~		●
		KCKL	10PE1-(N) (S) (H)	'08.02~	'96.02~		●
		KL	6WF1-TC	'11.06~	'99.06~		●
		KL	6WG1-TC	'10.06~	'98.06~		●
		KL	6SD1-TC	'12.08~	'00.08~		●
		PJ	6WF1-TC	'17.06~	'05.06~		●
		PJ	6WG1-TC	'17.07~	'05.07~		●
		PJ	6UZ1-TC	'17.07~	'05.07~		●
		PKG, PDG	6WG1-TC	'19.03~	'07.03~	●	
		PKG, PDG	6UZ1-TC	'19.03~	'07.03~	●	
		LKG, LDG	6UZ1-TC	'22.05~	'10.05~	●	
		QKG	6UZ1-TCS, TCN	'23.05~	'11.05~	●	

## 5. ISUZU DIAGNOSTIC SOFTWARE (Ver7.5\*) List of Engines

CLASSIFICATION	VEHICLE MODEL NAME	VEHICLE MODEL	ENGINE MODEL	REQUIRED MODEL YEAR		DIAGNOSTIC COUPLER	
				JAPANESE CALENDAR	WESTERN CALENDAR	COM	EXCL
LIGHT-DUTY BUS	JOURNEY	PB	J05D	'16.08~	'04.08~	●	
		BDG	J05D	'19.08~	'07.08~	●	
MEDIUM-DUTY BUS	ERGA M10	PA	6HK1-TCN	'16.08~	'04.08~		●
		PDG	6HK1-TCN	'19.08~	'07.08~		●
		PDG	6HF1 (CNG)	'19.11~	'17.11~		●
		SDG	4HK1-TCH	'23.11~	'11.11~	●	
		SKG	4HK1-TCH	'24.07~	'12.07~	●	
	GALA M10	PB	J07E	'16.09~	'04.09~	●	
		ADG	J07E	'19.02~	'07.02~	●	
		SKG	4HK1	'23.05~	'11.05~	●	
		SDG	J07E	'23.07~	'11.07~	●	
		HEAVY-DUTY BUS	GALA	KC, KL	8PE1-(N)(S)	'08.02~	'96.02~
KCKL	10PE1-(N)(S)(H)			'08.02~	'96.02~		●
ADG, BDG, LDG	J08E			'18.02~	'06.02~	●	
ADG, PKG, LKG	E13C			'17.08~	'05.08~	●	
QPG, QKG	6HK1-TCS			'22.08~	'10.08~	●	
LKG	J08E			'22.08~	'10.08~	●	
QPG	E13C			'24.08~	'12.08~	●	
QKG	4HK1-TCS			'24.05~	'12.05~	●	
ERGA	KC, KL		8PE1-(N)(S)	'08.02~	'96.02~		●
	KC, KL		6HE1-TCN	'08.02~	'96.02~		●
	KL		8PF1 (CNG)	'14.01~	'02.01~		●
	KL		6HA1 (CNG)	'12.06~	'00.06~		●
	PJ		6HK1-TCC	'16.08~	'04.08~		●
	PKG, PDG		6HK1-TCC	'19.08~	'07.08~		●
	LKG, LDG		6HK1-TCC	'21.08~	'10.08~	●	
	QKG, QPG		6HK1-TCC	'21.08~	'10.08~	●	
	OFF-ROAD		FORKLIFT GENERATOR	LIGHT-DUTY	4HK1-TC	'16.08~	'04.08~
LIGHT-DUTY		4JJ1-TC		'16.08~	'04.08~	●	
MEDIUM-DUTY		4HK1-TC		'16.08~	'04.08~	●	
HEAVY-DUTY		6HK1-TC		'16.08~	'04.08~	●	

## 6. ISUZU DIAGNOSTIC SOFTWARE (Ver7.5\*) List of Diagnostic Functions

SYSTEM	MAIN-FUNCTION	SUB-FUNCTION	CONTENTS	
ENGINE	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
	ACTIVE TEST	FUEL RAIL PRESSURE		Sets common rail pressure value.
		STOP INJECTOR		Stops fuel injection at cylinder #1~/#6.
		MAIN INJECTION PERIOD		Checks the change in injection timing.
		STOP PRE-INJECTION		Checks the fuel pre-injection volume of 0mm <sup>3</sup> /st in the area.
		FORCED INJECTOR		Checks the operating sound of the drive injector.
		GLOW RELAY COMMAND		Checks the glow relay and light ON display.
		EXHAUST BRAKE		Checks exhaust brake magnetic valve operation.
		RETARDER		Checks retarder magnetic valve operation.
		INTAKE THROTTLE		Checks intake throttle valve operation.
		EXHAUST THROTTLE		Checks exhaust throttle valve operation.
		EGR		Checks EGR valve open/close operation.
		TURBO CHARGER		Checks nozzle control actuator operation.
	WORK SUPPORT	CLEAR PUMP DEVICE LEARNING DIFFERENCE		Clears device differential learning value during supply pump replacement.
		INJECTOR ID		Checks ID code of the injector in each cylinder.
		ID CODE REGISTRATION		Registers ID code during injector replacement.
		ID UPLOAD		Reads & stores ID code from ECM before replacement.
		ID DOWNLOAD		Registers stored ID code after ECM replacement.
		DPD REGENERATION DATA RESET		Resets DPD regeneration data before DPD replacement.
		DPD DIFFERENTIAL PRESSURE MEASUREMENT		Displays differential pressure standard value of each vehicle; measures differential pressure.
		DPD FORCED REGENERATION		Removes accumulated PM in DPD thru repeat combustion.
		SLOW DPD REGENERATION		Removes accumulated PM in DPD thru repeat combustion.
Q ADJUSTMENT REVISION DATA UPLOAD			Reads Q adjustment revised data from ECM.	
Q ADJUSTMENT REVISION DATA DOWNLOAD			Write Q adjustment revised data in ECM.	
READ ENGINE START-UP FREQUENCY		Reads engine start-up frequency from ECM		
WRITE STARTER START-UP FREQUENCY		Sets start-up frequency after replacement of the starter.		
STOP IDLING	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
	WORK SUPPORT	ALTITUDE SERVICE VEHICLE SETTING		Selects whether it is an altitude service vehicle.
		VEHICLE INFORMATION UPDATE		Selects the engine transmission.
	CLEAR IDLING STOP SYSTEM MAINTENANCE DATA		Clears idling stop maintenance data.	

NOTE: The contents of the display, active test and work support diagnostic functions may differ depending on the vehicle model and model year.

## 6. ISUZU DIAGNOSTIC SOFTWARE (Ver7.5\*) List of Diagnostic Functions

SYSTEM	MAIN-FUNCTION	SUB-FUNCTION	CONTENTS	
SMOOTHER Ex	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
	WORK SUPPORT	VEHICLE TYPE PROGRAM		Selects vehicle type • altitude service vehicle.
		PTO REQUIRED ENGINE SPEED		Sets engine speed when using PTO.
		SPEEDOMETER DRIVING GEAR PROGRAM		Sets speedometer driving gear.
		TIRE SIZE PROGRAM		Sets tire movement load radius.
		TIRE REVISION RATE PROGRAM		Selects tire revision rate. (selectable at 0.96 only)
		OVERWRITE FINAL GEAR RATIO		Sets final gear ratio.
ABS INSTALLATION PROGRAM		Selects existing or non-existing installed ABS.		
SMOOTHER E	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
	WORK SUPPORT	VEHICLE TYPE PROGRAM		Selects vehicle type • altitude service vehicle.
		PTO REQUIRED ENGINE SPEED		Sets engine speed when using PTO.
		SPEEDOMETER DRIVING GEAR PROGRAM		Sets speedometer driving gear.
ABS6	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
	ACTIVE TEST	EXHAUST BRK CUT RELAY		Drives exhaust brake cut relay.
		ASR INFORMATION LAMP		Information Lamp ON/OFF
		ASR VALVE		Drives ASR valve.
		ABS WARNING LAMP		Warning Lamp ON/OFF
		FL CONTROL VALVE		Drives front-left (FL) control valve.
		FR CONTROL VALVE		Drives front-right (FR) control valve.
		RL CONTROL VALVE		Drives rear-left (RL) control valve.
RR CONTROL VALVE		Drives rear-right (RR) control valve.		
IDLING SPEED CONTROL		Checks engine speed control operation.		
ESC	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
ABS/ASR C112	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
	ACTIVE TEST	FR HOLD MODE		Sets front-right (FR) modulator to hold mode.
		FR EXHAUST MODE		Sets front-right (FR) modulator to exhaust mode.
		FL HOLD MODE		Sets front-left (FL) modulator to hold mode.
		FL EXHAUST MODE		Sets front-left (FL) modulator to exhaust mode.
		RR HOLD MODE		Sets rear-right (RR) modulator to hold mode.
		RR EXHAUST MODE		Sets rear-right (RR) modulator to exhaust mode.
RL HOLD MODE		Sets rear-left (RL) modulator to hold mode.		
RL EXHAUST MODE		Sets rear-left (RL) modulator to exhaust mode.		

NOTE: The contents of the display, active test and work support diagnostic functions may differ depending on the vehicle model and model year.

## 6. ISUZU DIAGNOSTIC SOFTWARE (Ver7.5\*) List of Diagnostic Functions

SYSTEM	MAIN-FUNCTION	SUB-FUNCTION	CONTENTS
ABS/ASR CI12	ACTIVE TEST	ASR VALVE	Drives ASR valve.
		EXHAUST BRK CUT RELAY	Drives exhaust brake cut relay.
		ENGINE CONTROL TEST	Checks engine speed control operation.
		WARNING LAMP	Warning Lamp ON/OFF
		INFORMATION LAMP TEST	Information Lamp ON/OFF
ABS/IESC	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
SMOOTHER G	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
	ACTIVE TEST	BUZZER SIGNAL	Conducts ON/OFF operation check.
		MAIN POWER SUPPLY RELAY	Conducts ON/OFF operation check.
		SOLENOID POWER SUPPLY RELAY	Conducts ON/OFF operation check.
		PTO RELAY	Conducts ON/OFF operation check.
		TRAILER RELAY	Conducts ON/OFF operation check.
		SPLITTER M/V_G (High)	Conducts ON/OFF operation check.
		SPLITTER M/V_G (Low)	Conducts ON/OFF operation check.
		RANGE M/V_J (High)	Conducts ON/OFF operation check.
		RANGE M/V_J (Low)	Conducts ON/OFF operation check.
		HSA M/V	Conducts ON/OFF operation check.
		CLUTCH AIR ON/OFF M/V1	Conducts ON/OFF operation check.
		CLUTCH AIR ON/OFF M/V2	Conducts ON/OFF operation check.
		CLUTCH M/V For EMERGENCY	Conducts ON/OFF operation check.
		CSB ( Counter Shaft Brake) M/V	Conducts ON/OFF operation check.
		GSU M/V POWER SUPPLY	Conducts ON/OFF operation check.
	EXHAUST BRAKE CUT	Conducts ON/OFF operation check.	
	WORK SUPPORT	CLEAR CLUTCH LEARNING VALUE	Clears clutch plate connection position learning value.
		CLEAR GEAR POSITION LEARNING VALUE	Clears initial stroke learning value of the gear-in actual driving force.
AIR SUSPENSION	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
	ACTIVE TEST	FORCED AIR SUPPLY (Rr-Fr Right-Shaft)	Conducts ON/OFF operation check.
		FORCED EXHAUST AIR (Rr-Fr Right-Shaft)	Conducts ON/OFF operation check.
		FORCED AIR SUPPLY (Rr-Fr Left-Shaft)	Conducts ON/OFF operation check.
		FORCED EXHAUST AIR (Rr-Fr Left-Shaft)	Conducts ON/OFF operation check.
		FORCED AIR SUPPLY (Rr-Rr Right-Shaft)	Conducts ON/OFF operation check.
		FORCED EXHAUST AIR (Rr-Rr Right-Shaft)	Conducts ON/OFF operation check.
		FORCED AIR SUPPLY (Rr-Rr Left-Shaft)	Conducts ON/OFF operation check.

NOTE: The contents of the display, active test and work support diagnostic functions may differ depending on the vehicle model and model year.

## 6. ISUZU DIAGNOSTIC SOFTWARE (Ver7.5\*) List of Diagnostic Functions

SYSTEM	MAIN-FUNCTION	SUB-FUNCTION	CONTENTS
AIR SUSPENSION	ACTIVE TEST	FORCED EXHAUST AIR (Rr-Rr Left-Shaft)	Conducts ON/OFF operation check.
		KICK DRIVE LAMP	Conducts ON/OFF operation check.
		HEIGHT LAMP	Conducts ON/OFF operation check.
		BUZZER	Conducts ON/OFF operation check.
		BUZZER (External)	Conducts ON/OFF operation check.
WORK SUPPORT	CLEAR LOADING HISTORY	Conduct clearing of loading history.	
SMOOTHER Fx	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
	WORK SUPPORT	ENGINE MODEL UPDATE	Changes engine model.
		TRANSMISSION MODEL UPDATE	Changes transmission model.
		PTO REQUIRED ENGINE SPEED	Sets engine speed when using PTO.
		OVERWRITE FINAL GEAR RATIO	Changes final gear ratio.
		PTO SETTING WRITING	Select altitude service vehicle, garbage vehicle, or others.
WARNING OPTION WRITING	Sets warning options YES or NO.		
BODY CONTROL MODULE	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
	ACTIVE TEST	ANSWER-BACK TEST	[END]⇒[OFF]⇒[ON]⇒Auto-[OFF] after 10 seconds
		BLOWER RELAY TEST	[END]⇒[OFF]⇒[ON]⇒Auto-[OFF] after 10 seconds
		COMPRESSOR RELAY TEST	[END]⇒[OFF]⇒[ON]⇒Auto-[OFF] after 10 seconds
		DOOR LOCK TEST	[END]⇒[OFF]⇒[ON]⇒Auto-[OFF] after 10 seconds
		DOOR UNLOCK TEST	[END]⇒[OFF]⇒[ON]⇒Auto-[OFF] after 10 seconds
		ROOM LIGHT TEST	[END]⇒[OFF]⇒[ON]⇒Auto-[OFF] after 10 seconds
		WIPER TEST	[END]⇒[OFF]⇒[ON]⇒Auto-[OFF] after 10 seconds
	WORK SUPPORT	CLEAR KEYLESS ENTRY REGISTRATION	Clears the remote key registration.
		ENGINE OIL LIFE SPAN WARNING MILEAGE	Changes engine oil life span warning mileage.
		TRANSMISSION OIL LIFE SPAN WARNING MILEAGE	Changes transmission life span warning mileage.
		STARTER LIFE SPAN ESTIMATED START-UP FREQ	Changes starter life span estimated start-up frequency.
		CLEAR HOUR-METER INFORMATION	Clears hour-meter information.
		CLEAR FUEL DATA DISPLAY	Clears fuel data display.

NOTE: The contents of the display, active test and work support diagnostic functions may differ depending on the vehicle model and model year.

## 6. ISUZU DIAGNOSTIC SOFTWARE (Ver7.5\*) List of Diagnostic Functions

SYSTEM	MAIN-FUNCTION	SUB-FUNCTION	CONTENTS
BODY CONTROL MODULE	WORK SUPPORT	CLEAR ENGINE OIL LIFE SPAN WARNING MILEAGE	Clears engine oil life span warning mileage.
		CLEAR TRANSMISSION OIL LIFE SPAN WARNING MILEAGE	Clears transmission life span warning mileage.
		ENGINE OIL WARNING THRESHOLD	Changes engine oil threshold warning (km unit).
		TRANSMISSION OIL WARNING THRESHOLD	Changes transmission oil threshold warning (km unit).
		BCM DATA UPLOAD/DOWNLOAD	Uploads or downloads BCM data.
IMMOBILIZER	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
	WORK SUPPORT	READ ECU IDENTIFICATION	Displays ECU identification information.
MIMAMORI	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
	WORK SUPPORT	VEHICLE TYPE INFO	Selects transmission type, with or without ABS.
		ENGINE MODEL UPDATE	Changes engine model.
		TRANSMISSION MODEL UPDATE	Changes transmission model.
		FINAL GEAR RATIO UPDATE	Changes final gear ratio.
		VALID TIRE RADIUS UPDATE	Changes valid tire radius (select tire size).
		AD INPUT UPDATE	ON=1, OFF=0
		ECM TROUBLE DATA	Displays engine run time, DTC code and status.
		OTHER ECU TROUBLE DATA	Trouble data & status ID, freeze frame data 1~20.
		ECU LOCK	Clears DPD data.
		CLEAR ALL MIMAMORI DATA	Clears all Mimamori data.
		CLEAR MIMAMORI DTC DATA	Clears all Mimamori DTC data.
		CLEAR ALL DMU ENGINE DATA	Clears all DMU engine data.
		CLEAR ALL TCM DMU DATA	Clears all transmission control module data.
		DMU ENGINE FORCED RECORD	Forcibly records DMU engine.
		TCM DMU FORCED RECORDING	Forcibly records DMU Transmission.
I S S	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
	ACTIVE TEST	LAMP SYSTEM	Idling Stop Lamp, Maintenance Lamp Test ⇒ [Operation]/[Non-Operation]/[END]
		RELAY SYSTEM	Starter relay, A/C Cut-off Relay, Low Beam Cut Relay, Buzzer Cut Relay, Idling-up Cut Relay Test ⇒ [Operation]/[Non-Operation]/[END]
		MAGNETIC VALVE SYSTEM	Engine Stop Valve Test ⇒ [Operation]/[Non-Operation]/[END]
	WORK SUPPORT	START COUNTER RESET	Resets start counter.
		START COUNTER PROGRAM	Inputs current counter operation frequency & general counter operation frequency.
		VEHICLE TYPE PROGRAM	Selects vehicle type.

NOTE: The contents of the display, active test and work support diagnostic functions may differ depending on the vehicle model and model year.

## 6. ISUZU DIAGNOSTIC SOFTWARE (Ver7.5\*) List of Diagnostic Functions

SYSTEM	MAIN-FUNCTION	SUB-FUNCTION	CONTENTS
CLUTCH-FREE	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
	WORK SUPPORT	DISPLAY CLUTCH ABRASION DATA	Reads clutch abrasion data from ECU.
		WRITE CLUTCH ABRASION DATA	Writes clutch abrasion data during clutch pad replacement.
UREA SCR	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
	ACTIVE TEST	UREA WATER INJECTOR	Performs increase/decrease AdBlue injection quantity.
		UREA RETURN VALVE	Performs ON/OFF operations check.
		COOLING CONTROL VALVE	Performs tank heater cooling control valve ON/OFF operation check.
	WORK SUPPORT	SCR CATALYST DATA RESET	Resets SCR catalyst data identification value.
		NOx SENSOR 1 DATA RESET	Resets NOx sensor 1 data identification value.
		EXHAUST GAS TEMPERATURE SENSOR 3	Resets exhaust gas temperature sensor 3 data identification value.
		UREA WATER INJECTION CONTROL MODULE	Resets urea water injection control module data identification value.
		OXIDATION CATALYST DATA RESET	Resets oxidation catalyst data identification value.
		UREA RETURN VALVE	Resets urea return valve data identification value.
UREA WATER INJECTOR	Resets urea water injector data identification value.		
ABS/ASR	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
	ACTIVE TEST	LAMP SYSTEM	Warning Lamp (ABS, ARS)
		RELAY SYSTEM	ABS Relay

NOTE: The contents of the display, active test and work support diagnostic functions may differ depending on the vehicle model and model year.



## 7. UD TRUCKS DIAGNOSTIC SOFTWARE Ver(2.1\*) List of Specific Vehicle System

VEHICLE TYPE	REQUIRED SYSTEM	REQUIRED MODEL YEAR	READ FAULT CODE	FREEZE DATA	DATA STREAM	WORK SUPPORT	ACTIVE TEST
CONDOR LIGHT-DUTY	ENG	2002~	●		●	●	●
	STOP IDLING	2007~	●		●	●	
	CLUTCH-FREE	2002~	●		●	●	
	SMOOTHER E	2002~	●		●	●	
	SMOOTHER EX	2007~	●		●	●	
	BCM	2006~	●		●	●	●
	IMMOBILIZER	2006~	●				
	MIMAMORI	2007~	●		●	●	
CONDOR MEDIUM-DUTY	ENG	2000~	●		●		
	ESCOT	2000~	●		●		
CONDOR MEDIUM-DUTY J07E/J08E	ENG	2004~	●		●	●	●
BIG THUMB	ENG	2000~	●		●		
	ESCOT	2000~	●		●		
QUON	ENG	2004~	●		●		
	ESCOT	2004~	●		●		
	UDS	2004~	●		●		
BUS	ENG	2000~	●		●		
	ESCOT	2000~	●		●		
	UDS	2004~	●		●		

## 8. UD TRUCKS DIAGNOSTIC SOFTWARE Ver(2.1\*) List of Engines

CLASSIFICATION	VEHICLE MODEL NAME	VEHICLE MODEL	ENGINE MODEL	REQUIRED MODEL YEAR		DIAGNOSTIC COUPLER	
				JAPANESE CALENDAR	WESTERN CALENDAR	COM	EXCL
LIGHT-DUTY TRUCK	CONDOR (ISUZU ELF)	KK	4HF1、4HF1-CNG	'11.01~	'99.01~	●	
		KK	4HG1、4HG1-LPG	'11.04~	'99.04~	●	
		KK	4HJ1	'11.04~	'99.04~	●	
		KK	4HK1-T	'12.12~	'00.12~	●	
		KR	4HJ1	'14.08~	'02.08~	●	
		KR	4HJ1	'14.08~	'02.08~	●	
		KR	4HL1-N	'14.06~	'02.06~	●	
		KR	4HL1	'14.06~	'02.06~	●	
		KR	4HL1-N	'14.06~	'02.06~	●	
		PB	4HG1 (LPG)	'16.06~	'04.06~	●	
		PB	4HF1 (CNG)	'16.06~	'04.06~	●	
		PB	4JG2 (LPG)	'16.06~	'04.06~	●	
		PB	4HL1	'16.06~	'04.06~	●	
		PDG	4HK1	'18.12~	'06.12~	●	
		BKG	4JJ1	'18.12~	'06.12~	●	
		BDG	4JJ1	'18.12~	'06.12~	●	

## 8. UD TRUCKS DIAGNOSTIC SOFTWARE Ver (2.1\*) List of Engines

CLASSIFICATION	VEHICLE MODEL NAME	VEHICLE MODEL	ENGINE MODEL	REQUIRED MODEL YEAR		DIAGNOSTIC COUPLER	
				JAPANESE CALENDAR	WESTERN CALENDAR	COM	EXCL
MEDIUM-DUTY TRUCK	CONDOR	KK	FE6	'11.05~	'99.05~	●	
		KK	FU6 (CNG)	'12.05~	'00.05~	●	
	CONDOR	PB	J07E	'16.04~	'04.04~	●	
		PA	J08E	'16.10~	'04.10~	●	
		BKG	J08E	'19.05~	'07.05~	●	
		BDG	J08E	'19.05~	'07.05~	●	
		SKG, TKG	GH5, GH7	'23.07~	'07.05~	●	
		QKG, LDG	GH7	'23.07~	'07.05~	●	
HEAVY-DUTY TRUCK	BIG THUMB	KL	RF8、RG8、RH8	'11.11~	'99.11~	●	
		KL	GE13T	'11.11~	'99.11~	●	
	QUON	ADG	MD92T	'16.11~	'04.11~	●	
		ADG	GE13T	'17.05~	'05.05~	●	
		PKG	GE13T	'19.01~	'07.01~	●	
		LKG	GH11, GH13	'22.07~	'10.07~	●	
		LDG	GH11	'22.07~	'10.07~	●	
LIGHT-DUTY BUS	SPACE RUNNER	KK	FE6	'11.03~	'99.03~	●	
MEDIUM-DUTY BUS	SPACE RUNNER	KK	FE6	'11.04~	'99.04~	●	
		KK	FU6 (CNG)	'11.04~	'99.04~	●	
		PB	J07E-TC	'16.08~	'04.08~	●	
		PDG	6M60	'18.12~	'07.12~	●	
HEAVY-DUTY BUS	SPACE ARROW	KL	FE6	'19.01~	'07.01~	●	
		PK	J07E-TC	'19.01~	'07.01~	●	
		PDG	6M60	'19.01~	'07.01~	●	
HEAVY-DUTY BUS	SPACE WING	KL	RH8	'19.01~	'07.01~	●	
		ADG	MD92TK	'19.01~	'07.01~	●	
		BKG	6M70	'19.01~	'07.01~	●	

## 9. UD TRUCKS DIAGNOSTIC SOFTWARE Ver (2.1\*) List of Diagnostic Functions

- CONDOR-Light-Duty is an Isuzu ELF-OEM vehicle. Please refer to the list of diagnostic functions of Isuzu.
- For CONDOR-Medium-Duty ENG model (J07E/J08E), please refer to the list of diagnostic functions of Hino ENG.

### DIAGNOSTIC FUNCTIONS of F-system engine, P-system engine, GE 13 engine equipped vehicles

SYSTEM	MAIN-FUNCTION	SUB-FUNCTION	CONTENTS
ENGINE	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
ESCOT	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
UDS UREA SCR	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.

## 10. MITSUBISHI FUSO DIAGNOSTIC SOFTWARE Ver (7. 2\*) List of Specific Vehicle System

VEHICLE TYPE	REQUIRED SYSTEM	REQUIRED MODEL YEAR	READ FAULT CODE	FREEZE DATA	DATA STREAM	WORK SUPPORT	ACTIVE TEST
CANTER	ENG	1997~	●		●	●	●
	ENG, EEC	2010~	●	●	●	●	●
	UREA SCR	2010~	●	●	●	●	●
	AT	2002~	●		●		
	INOMAT	2007~	●		●		●
	TCM	2010~	●	●	●	●	●
	ABS	1998~	●		●		●
	EZGO	2000~	●		●		●
	MOTOR CONTROL	2007~	●		●		●
	BATTERY CONTROL	2007~	●		●		●
	SRS	1997~	●		●		
FIGHTER	ENG	1999~	●	●	●	●	●
	UREA SCR	2010~	●	●	●	●	●
	AT	2010~	●		●		
	INOMAT	2007~	●				
	ABS	2002~	●		●		●
	EZGO	2000~	●				
	SRS	1999~	●				
	IMMOBILIZER	2006~	●				
SUPER GREAT	ENG	2000~	●	●	●	●	●
	UREA SCR	2010~	●	●	●	●	●
	INOMAT	2010~	●		●		●
	ABS	2000~	●				
	EZGO	2000~	●				
	SRS	2000~	●		●		●
	IMMOBILIZER	2004~	●		●		●
	HEADLIGHT LEVELING	2004~	●		●		●
	INTEGRATED CONTROL	2004~	●		●		●
ROSA	ENG	1997~	●		●	●	●
	ENG, EEC	2010~	●	●	●	●	●
	UREA SCR	2010~	●	●	●	●	●
	AT	2002~	●		●		
	INOMAT	2007~	●		●		●
	TCM	2010~	●	●	●	●	●
	ABS	1998~	●		●		●
	EZGO	2000~	●		●		●
	MOTOR CONTROL	2007~	●		●		●
	BATTERY CONTROL	2007~	●		●		●
	SRS	1997~	●		●		

## 10. MITSUBISHI FUSO DIAGNOSTIC SOFTWARE Ver (7. 2\*) List of Specific Vehicle System

VEHICLE TYPE	REQUIRED SYSTEM	REQUIRED MODEL YEAR	READ FAULT CODE	FREEZE DATA	DATA STREAM	WORK SUPPORT	ACTIVE TEST
AERO MIDI	ENG	1999~	●	●	●	●	●
	UREA SCR	2011~	●	●	●	●	●
	ABS	2000~	●		●		
	EZGO	1999~	●		●		●
	SRS	1999~	●				
AERO STAR	ENG	1999~	●	●	●	●	●
	UREA SCR	2011~	●	●	●	●	●
	ABS	1999~	●		●		●
	EZGO	2000~	●		●		●
	SRS	1999~	●				
AERO ACE	ENG	1999~	●	●	●	●	●
	UREA SCR	2010~	●	●	●	●	●
	ABS	1999~	●		●		●
	EZGO	2000~	●		●		●
	SRS	1999~	●		●		●
AERO ACE SHORT	ENG	1999~	●	●	●	●	●
	UREA SCR	2011~	●	●	●	●	●
	ABS	1999~	●		●		●
	EZGO	2000~	●		●		●
	SRS	2000~	●		●		
AERO QUEEN	ENG	1999~	●	●	●	●	●
	UREA SCR	2010~	●	●	●	●	●
	ABS	1999~	●		●		●
	EZGO	2000~	●		●		●
	SRS	1999~	●	●	●	●	●

# 11. MITSUBISHI FUSO DIAGNOSTIC SOFTWARE Ver (7.2\*) List of Engines

CLASSIFICATION	VEHICLE MODEL NAME	VEHICLE MODEL	ENGINE MODEL	REQUIRED MODEL YEAR		DIAGNOSTIC COUPLER	
				JAPANESE CALENDAR	WESTERN CALENDAR	COM	EXCL
LIGHT-DUTY TRUCK	CANTER	KC	4D33, 4D34	'09.04~	'97.10~	●	
		KC, KK	4M50, 4M51	'09.10~	'97.10~	●	
		PA, PB	4M50	'16.10~	'04.10~	●	
		PDG	4M50	'19.01~	'07.01~	●	
		BKG	4M50	'20.05~	'08.05~	●	
		PDG	4M42	'18.08~	'06.08~	●	
	SKG, TKG, SDG	4P10	'22.08~	'10.08~	●		
	CANTER GUTS	PA	4M50	'17.10~	'05.10~	●	
	PA	4M42	'20.05~	'08.05~	●		
MEDIUM-DUTY TRUCK	FIGHTER	KL	6M61	'11.02~	'99.02~	●	
		KK	6M60	'14.02~	'02.02~	●	
		PJ, PA	6M60	'16.06~	'04.06~	●	
		PDG, ADG	6M60	'18.05~	'06.05~	●	
		BKG	6M60	'20.06~	'08.09~	●	
		TKG, LKG	6M60	'22.10~	'10.10~	●	
HEAVY-DUTY TRUCK	SUPER GREAT	KC	6D40	'09.07~	'97.06~	●	
		KL	8DC11	'11.08~	'99.08~	●	
		KL	8M21, 8M22	'11.06~	'99.06~	●	
		KL	6M70	'11.04~	'99.04~	●	
		PJ	6M70	'15.08~	'03.08~	●	
		BKG, BDG	6M70	'19.06~	'07.06~	●	
		LKG, QPG	6R10	'22.06~	'10.06~	●	
LIGHT-DUTY BUS	ROSA	KC, KK	4M50	'09.10~	'97.10~	●	
		PA	4M50	'16.10~	'04.10~	●	
		PDG	4M50	'19.01~	'07.01~	●	
		TPG	4P10	'22.08~	'10.08~	●	
MEDIUM-DUTY BUS	AERO MIDI	KK	6M61	'11.07~	'99.07~	●	
		KK, PA	4M50	'14.02~	'02.04~	●	
		PA, PDG,	6M60	'16.01~	'04.11~	●	
		SKG, TPG	6M60	'23.11~	'11.11~	●	
HEAVY-DUTY BUS	AERO STAR	KL, PJ	6M70	'12.05~	'00.05~	●	
		PJ, PKG	MD92	'16.03~	'04.03~	●	
		LKG, QKG	6M60	'22.05~	'10.05~	●	
	AERO ACE	KL	8M21	'12.05~	'00.05~	●	
		PJ, BKG	6M70	'17.10~	'05.10~	●	
		QRG, QTG	6R10	'22.09~	'10.09~	●	
	AERO ACE SHORT	PDG	6M60	'19.06~	'07.06~	●	
		QDG	6M60	'22.09~	'10.09~	●	
	AERO QUEEN	KL	8M21	'12.05~	'00.05~	●	
PJ, BKG		6M70	'17.10~	'05.10~	●		
QRG, QTG		6R10	'22.09~	'10.09~	●		

## 12. MITSUBISHI FUSO DIAGNOSTIC SOFTWARE Ver (7.2\*) List of Diagnostic Functions

### Light-Duty Truck: Engine Type 4P10

SYSTEM	MAIN-FUNCTION	SUB-FUNCTION	CONTENTS	
EEC ENGINE	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
	ACTIVE TEST	COLD START		Forcibly operates cold start.
		RAIL INTERNAL PRESSURE REGULATOR VALVE		Forcibly operates common rail pressure control valve.
		RAIL INTERNAL PRESSURE LIMITER VALVE		Forcibly operates common rail pressure limiter valve.
		FUEL INJECTOR		Forcibly operates injector.
		BOOST PRESSURE CONTROL		Forcibly operates boost pressure control.
		EGR CONTROL		Forcible operates EGR control.
		EXHAUST BRAKE SOLENOID VALVE		Forcible operates exhaust brake.
		AdBlue DISTRIBUTION QUANTITY TEST		Forcibly operates additional urea water.
		LEAK (AdBlue): CHECK		Checks AdBlue (Urea Water) leakage.
		AdBlue PRESSURE LINE CAPACITY AdBlue RETURN CHECK		Checks urea water line back-flow function.
		PARTICULATE FILTER RE-COMBUSTION		Forcibly operates DPF regeneration.
		WORK SUPPORT		
				Resets fuel injector identification value.
				Resets rail internal pressure limiter valve identification value.
				Resets rail pressure sensor identification value.
				Resets O2 Sensor identification value.
				Resets hot film air mass sensor identification value.
				Resets turbo-charger identification value.
			Identification works after turbo-charger replacement.	
			Resets EGR valve identification value.	
			Resets particulate filter/oxidation catalyst identification value.	
			Resets particulate filter differential pressure sensor identification value.	
			Engine Control Unit (Identifies control unit engine control unit.)	
			Resets engine control unit identification value.	
		Adjusts injector injection quantity (HEV).		

NOTE: The contents of the display, active test and work support diagnostic functions may differ depending on the vehicle model and model year.

## 12. MITSUBISHI FUSO DIAGNOSTIC SOFTWARE Ver (7.2\*) List of Diagnostic Functions

### Light-Duty Truck: Engine Type 4P10

SYSTEM	MAIN-FUNCTION	SUB-FUNCTION	CONTENTS	
TCM TRANSMISSION	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
	ACTIVE TEST	GEAR SHIFT		Shifts to forward gear during vehicle stop, manual release gear limit (can select starting gear to 6 <sup>th</sup> gear).
		LINE PRESSURE HIGH		Line Pressure - High : Forced Retention
		LINE PRESSURE LOW		Line Pressure - Low : Forced Retention
		OIL COOLER ON		Cooler Lubrication ON : Forced Retention
		OIL COOLER OFF		Cooler Lubrication OFF: Forced Retention
		INNER CLUTCH ON		Clutch 1 ON (1.2A) : Forced Retention
		OUTER CLUTCH ON		Clutch 2 ON (1.2A) : Forced Retention
		SHIFT LOCK RELEASE		Release shift lock.
				Turns ON switch valve for the cooling circuit.
				Turns OFF switch valve for the cooling circuit.
				Turns ON blower motor relay.
				Turns OFF blower motor relay.
				Operates motor (Discharge Mode).
				Operates motor (Charge Mode).
		WARNING LAMP		Lamp ON/OFF
ABS	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
	ACTIVE TEST	FR MODULATOR		Sets FR modulator to HOLD Mode.
				Sets FR modulator to EXHAUST Mode.
		FL MODULATOR		Sets FL modulator to HOLD Mode.
				Sets FL modulator to EXHAUST Mode.
		RR MODULATOR		Sets RR modulator to HOLD Mode.
				Sets RR modulator to EXHAUST Mode.
		RL MODULATOR		Sets RL modulator to HOLD Mode.
				Sets RL modulator to EXHAUST Mode.
		ASR VALVE		ASR Valve
		EXHAUST BRK CUT RELAY		Forcibly drives exhaust brake cut relay.
		ENGINE CONTROL TEST		Checks engine speed control.
WARNING LAMP		Warning Lamp ON/OFF		
INFO LAMP TEST		Information Lamp Test ON/OFF		
WORK SUPPORT	DRIVE SYSTEM		Sets rear wheel drive system(Drum/Disk)	
SRS	READ FAULT CODE		Displays and clears the trouble point.	

NOTE: The contents of the display, active test and work support diagnostic functions may differ depending on the vehicle model and model year.

## 12. MITSUBISHI FUSO DIAGNOSTIC SOFTWARE Ver (7.2\*) List of Diagnostic Functions

SYSTEM	MAIN-FUNCTION	SUB-FUNCTION	CONTENTS	
ENGINE	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
	ECU RESET		Resets DPF regeneration data.	
	ACTIVE TEST	EGR1, 2, 3		Checks specified EGR valve ON/OFF operation.
		VGT M/V1, 2, 3		Checks specified VGT valve ON/OFF operation.
		POWER TARD M/V		Checks power tard valve ON/OFF operation.
		EXHAUST BRAKE M/V		Checks exhaust brake valve ON/OFF operation.
		AUXILIARY BRAKE LP		Checks auxiliary brake indicator lamp ON/OFF operation.
		AIR HEATER RELAY, LAMP		Checks relay' s & lamp' s ON/OFF operation.
		STARTER CONTINUOUS POWER PREVENTION RELAY		Checks relay ON/OFF operation.
		EDU RELAY		Checks relay ON/OFF operation.
		MIL LAMP		Checks lamp ON/OFF operation.
		AIRCON SW1		Checks aircon ON/OFF operation.
		IDLE-UP CANCEL SW		Checks idle-up cancel operation.
		FUEL LEAKAGE CHECK		Checks fuel leakage according to high fuel pressure drive.
		VGT TEST		Measures turbo charger boost pressure.
		INJECTOR STOP		Fuel injection stop on cylinder #1~#6.
		INTAKE THROTTLE		Checks actual opening of opening setting and operation time.
		UREA RELATED-LAMP		Checks remaining quantity, identification, SCR warning and each lamp operation.
		WORK SUPPORT	ID CODE DISPLAY	
	ID CODE REGISTRATION			Registers ID code during injector replacement.
	PUMP INITIALIZATION			Clears & initializes supply pump learning value.
	Q ADJ No. DISPLAY			Displays registered Q Adjustment Number.
	Q ADJ MAINTENANCE No. REGISTRATION			Registers Q Adjustment Maintenance Number.
	AIR FLOW SENSOR CHARACTERISTICS No. DISPLAY			Displays registered air flow sensor characteristics number.
	AIR FLOW SENSOR CHARACTERISTICS No. REGISTRATION			Registers air flow sensor characteristics number.
	DPF DIFFERENTIAL PRESSURE EASUREMENT			Displays vehicle differential pressure standards, measures DPF differential pressure.
DPF FORCED REGENERATION			Removes accumulated PM in DPF thru repeat combustion.	

NOTE: The contents of the display, active test and work support diagnostic functions may differ depending on the vehicle model and model year.



## 12. MITSUBISHI FUSO DIAGNOSTIC SOFTWARE Ver (7.2\*) List of Diagnostic Functions

SYSTEM	MAIN-FUNCTION	SUB-FUNCTION	CONTENTS	
SCR UREA	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
	ACTIVE TEST	SYSTEM CHECK		Executes urea water temperature and pressure check.
		ADD' L VALVE CHECK 1		Forcibly adds urea water.
		ADD' L VALVE CHECK 2		Forcibly adds urea water.
		ADD' L VALVE CHECK 3		Forcibly adds urea water.
		TEST MODE END		Forcibly purges air during test end.
		TANK HEATING VALVE		Turns ON/OFF tank heating valve with interval of 120 seconds.
		COMPRESSED AIR CONTROL VALVE		Turns ON/OFF compressed air control valve with interval of 120 seconds.
		PUMP MODULATOR		Turns ON/OFF pump modulator with interval of 120 seconds.
		EXTERNAL SUCTION LINE HEATER		Turns ON/OFF external return line heater with interval of 120 seconds.
		EXTERNAL ADD' L LINE HEATER		Turns ON/OFF external additional line heater with interval of 120 seconds.
		AdBlue LEAKAGE FLAG CLEAR		Clears AdBlue leakage flag.
		FREEZE NUMBER COUNTER 1, 2 RESET		Reset the freeze number counters 1 & 2.
A/T	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
INOMAT	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
	ACTIVE TEST	D/U MAIN POWER ON		Drive Unit Main Power ON/OFF
		D/U SUB POWER ON		Drive Unit Sub Power ON/OFF
		WARNING BUZZER ON		Warning Buzzer ON/OFF
		2 <sup>nd</sup> SHIFT		Specified Shift Position
		3 <sup>rd</sup> SHIFT		Specified Shift Position
		4 <sup>th</sup> SHIFT		Specified Shift Position
		5 <sup>th</sup> SHIFT		Specified Shift Position
		NEUTRAL		Specified Shift Position
		7 <sup>th</sup> SHIFT		Specified Shift Position
		8 <sup>th</sup> SHIFT		Specified Shift Position
		9 <sup>th</sup> SHIFT		Specified Shift Position
10 <sup>th</sup> SHIFT		Specified Shift Position		

NOTE: The contents of the display, active test and work support diagnostic functions may differ depending on the vehicle model and model year.

## 12. MITSUBISHI FUSO DIAGNOSTIC SOFTWARE Ver (7.2\*) List of Diagnostic Functions

SYSTEM	MAIN-FUNCTION	SUB-FUNCTION	CONTENTS	
ABS	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
	ACTIVE TEST	FL VALVE ON		Checks valve ON/OFF operation.
		FR VALVE ON		Checks valve ON/OFF operation.
		RL VALVE ON		Checks valve ON/OFF operation.
		RR VALVE ON		Checks valve ON/OFF operation.
		VALVE RELAY ON		Turns ON valve relay.
		VALVE RELAY OFF		Turns OFF valve relay.
		MOTOR RELAY ON		Turns ON motor relay.
		MOTOR RELAY OFF		Turns OFF motor relay.
		ABS W/L ON		Checks ABS warning lamp ON/OFF operation.
		EXHAUST BRAKE RELAY ON		Turns ON exhaust brake relay.
		EXHAUST BRAKE RELAY OFF		Turns OFF exhaust brake relay.
		ASR CUT VALVE ON		Turns ON ASR cut valve.
		ASR CUT VALVE OFF		Turns OFF ASR cut valve.。
		ASR CHARGE ON		ASR Charge ON
		ASR CHARGE OFF		ASR Charge OFF
		ASR LAMP ON		Turns ON ASR lamp.
ASR MOTOR ON		Turns ON ASR motor.		
EZGO	READ FAULT CODE		Displays and clears the trouble point.	
	DATA STREAM		Displays data; records the diagnostic results.	
	ACTIVE TEST	AUS M/V2		Checks AUS M/V2 ON/OFF operation.
		AUS M/V1		Checks AUS M/V1 ON/OFF operation.
		AUS BUZZER		Checks AUS buzzer ON/OFF operation.
		AUS OPERATING LAMP		Checks AUS operating lamp ON/OFF operation.
		AUS WARNING LAMP		Checks AUS warning lamp operation.
		PARKING BRAKE LAMP		Checks parking brake lamp ON/OFF operation.
		AUS POWER RETENTION RELAY		Checks AUS power retention relay ON/OFF operation.
		LB HORN		Checks LB horn ON/OFF operation.
		LB OPERATION SET-UP LAMP		Checks LB operation set-up lamp ON/OFF operation.
		LB PRESSURE RETENTION LAMP		Checks LB pressure retention lamp ON/OFF operation.

NOTE: The contents of the display, active test and work support diagnostic functions may differ depending on the vehicle model and model year.

## 12. MITSUBISHI FUSO DIAGNOSTIC SOFTWARE Ver (7.2\*) List of Diagnostic Functions

SYSTEM	MAIN-FUNCTION	SUB-FUNCTION	CONTENTS
SRS	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
IMMOBILIZER	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
	ACTIVE TEST	INTERNAL FET	Turns ON FET.
		INJECTOR LAMP ON	Checks injector lamp ON.
MOTOR CONTROL	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
	ACTIVE TEST	MOTOR DRIVE	Checks increase speed of engine and motor.
		MOTOR REVERSE DRIVE (POWER GENERATION)	Checks increase charge rate of high voltage battery.
		MAIN CONTACTOR (+) OPERATION	Checks main contactor (+) operating sound.
		MAIN CONTACTOR (-) OPERATION	Checks main contactor (-) operating sound.
		PRE-CHARGE CONTACTOR OPERATION	Checks pre-charge contactor operating sound.
		RADIATOR FAN OPR' N	Operates the radiator fan.
WATER PUMP OPR' N	Uses air vent of the high cooling voltage system.		
BATTERY CONTROL	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
	ACTIVE TEST	COOLING FAN 1~8 START-UP	Turns ON/OFF the cooling fan No. 1~8.
INTEGRATED CONTROLS	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
	ACTIVE TEST	INTEGRATED CONTROL RELATED LAMP	Checks ON/OFF operation.
		COOLER CONTROL SIGNAL	Checks ON/OFF operation.
		VEHICLE STOPPING SIGNAL	Checks ON/OFF operation.
		AUXILIARY MOTOR ROTATING SIGNAL	Checks ON/OFF operation.
		REVERSE RELAY	Checks ON/OFF operation.
AMMETER, METER, ETC.	Checks operation.		
HEADLIGHT LEVELING	READ FAULT CODE		Displays and clears the trouble point.
	DATA STREAM		Displays data; records the diagnostic results.
	ACTIVE TEST	LEVELING ACT DRIVE	Drives the leveling actuator.

NOTE: The contents of the display, active test and work support diagnostic functions may differ depending on the vehicle model and model year.

## WANTED: DEALERS/DISTRIBUTORS

A diagnostic tester is an essential tool for car maintenance. It would be difficult to perform repairs and maintenance if the trouble code and data are not checked. After the replacement of car parts, it requires registration, initialization and learning of ID codes. If this procedures are not done the check lamp will light and it will not work properly.

Our company's diagnostic tester (DT-3300) supports all Japanese cars and European cars. In particular, diagnostic features of Japanese cars are in accordance with the functions of a genuine tester of the vehicle manufacturer, thus a very good device. Our DT-3300 is now active and is being used in Southeast Asian countries, Australia, New Zealand and South American countries.

Japan Venture is looking/recruiting for dealers or distributors in each of these countries. Please contact us through email or by telephone.

Thank you very much.

### JAPAN VENTURE INCORPORATED

#### **Overseas Business Division**

Head Office: 1532-9 Kasahara-Cho, Mito City  
Ibaraki Prefecture, Japan 310-0852

Tel. No. : +81-29-305-8667

Fax No. : +81-29-305-8668

E-mail: info@japan-venture.com

Website: <http://www.japan-venture.com>